


Replacing valve stem in faucet

1. Unscrew Handle



If you have a cross lever handle, please just remove the cover and follow the same procedure.

2. Unscrew Valve cover

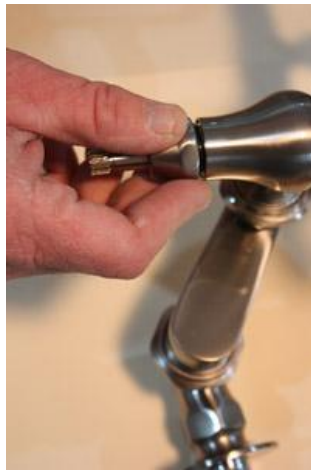


When using a wrench, we strongly advise not to have metal against metal as it could damage the surface of the part.

3. Unscrew Valve



Replacing valve stem in faucet

4. Remove Valve Stem with Ceramic Valve

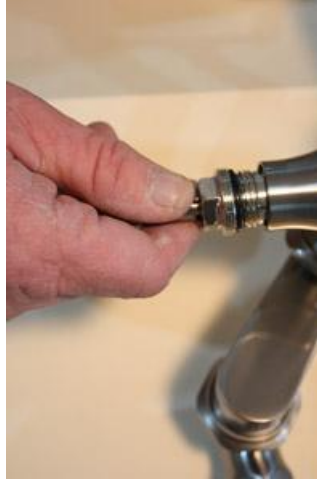

5. Install New Valve and Replace Parts taken off. Test

