


Victorian Drain DV039 & BW04

Vintage Tub Drain with Overflow

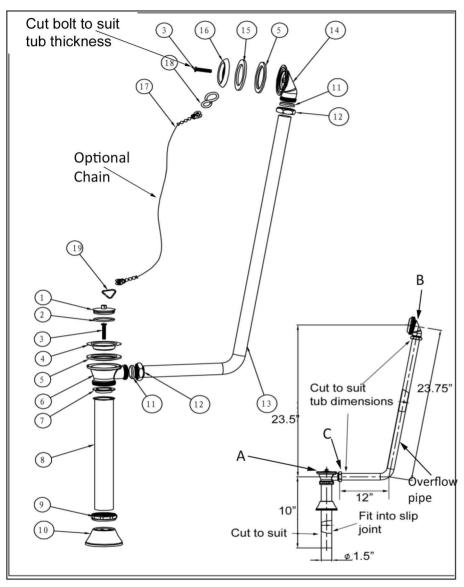

Part # Description

- 1 Metal stopper
- 2 O' ring
- 3 Screw
- 4 Waste Flange
- 5 Washer
- 6 Waste body
- 7 Washer
- 8 Tail pipe
- 9 Nut
- 10 Escutcheon
- 11 Washer
- 12 Nut
- 13 Overflow pipe
- 14 Overflow body
- 15 Washer
- 16 Overflow flange
- 17 Ball chain
- 18 8' shape connector
- 19 Triangle connector

INSALLATION INSTRUCTION

After measuring and cutting the overflow pipe to suit the specific tub, we recommend that the tub drain at 'A' is attached first. Use the washer supplied for under the tub and apply plumbers putty between tub and drain flange inside the tub.

Attach the overflow pipe and tighten at 'C'.

Now attach the overflow pipe to 'B' and pull towards the overflow hole. Use the screw #3 (should be cut to size) and tighten to overflow cover. The overflow pipe is designed to offer a little flexibility to suit all of our tub angles.