

Classique™ & Hotel Collection™ Soaker and Air Jetted Tubs


Baths of Distinction, Inc.
5843 Carrier Street, Saint Petersburg, FL USA 33714
1-866-938-3880

Pedestal Tub Assembly






All tubs meet or exceed ANSI Z124.1.2; CSA B45.0-02 & CSA B45.5-02 (Certified IAPMO R&T Labs)

All faucets and hardware supplied cUPC listed



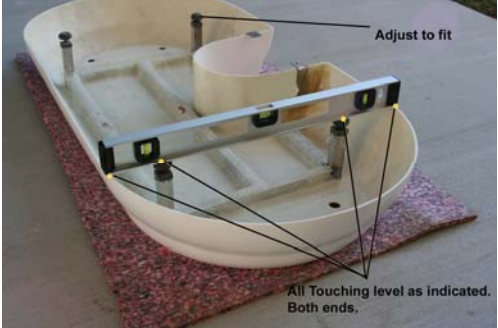



All blowers cULus listed 

INSTALLATION MANUAL – PEDESTAL BATH TUBS

<p>1.</p> <ul style="list-style-type: none"> Place the pedestal upside down on a soft surface. Use a level to adjust the frame support legs to be level with the pedestal edge. All four points (on both ends) highlighted with the YELLOW dot on the photo should be touching the level. 	
<p>2.</p> <ul style="list-style-type: none"> Place the base in position and level from all sides. 	
<p>2A.</p> <ul style="list-style-type: none"> Make any fine adjustments to the frame support legs to achieve a true level. It is important to keep the frame support feet as level with the pedestal edge as possible. 	
<p>3.</p> <ul style="list-style-type: none"> Mark off the holes for the fixing mounts on the base. Depending on whether you have a ceramic or wooden floor, either drill a hole for the raw plug or simply leave the mark. If preferred, an epoxy compound can be used to attach the bracket to the floor. 	
<p>4.</p> <ul style="list-style-type: none"> Turn the tub over to be ready to fix the base. It is suggested that the cardboard and wrapping should be left on the tub to protect it during this operation. In all cases, do not place the upturned tub on a hard surface. Remove the bolt protection covers. 	

INSTALLATION MANUAL – PEDESTAL BATH TUBS

<p>5.</p> <ul style="list-style-type: none"> Remove the nuts and washer from the fixing bolt. 	
<p>6.</p> <ul style="list-style-type: none"> Place the pedestal onto the tub and attach using the nut and washers supplied. 	
<p>7.</p> <ul style="list-style-type: none"> Turn the tub upright again and position over the marked fixing holes. Tighten screw to floor. If epoxy has been used, there will be no need for the screws supplied, simply place the epoxy under the clip. 	
<p>8.</p> <ul style="list-style-type: none"> Caulk around the base of the pedestal and the floor. The caulk is not essential, but in case of any water build up for any reason on your bathroom floor, it will not run under and sit below the base. 	
<p>Bath tub meets or exceeds ANSI Z214.1.1-2005 and is cUPC Listed by IAPMO laboratories.</p> <p>We strongly recommend that you use a qualified installer.</p>	<p>Items Included;</p> <ul style="list-style-type: none"> 4 large washers for base to tub nut. 2 stainless lag screws to attach tub to floor 2 rubber washers to mount under fixing bracket on tub to floor mount.