



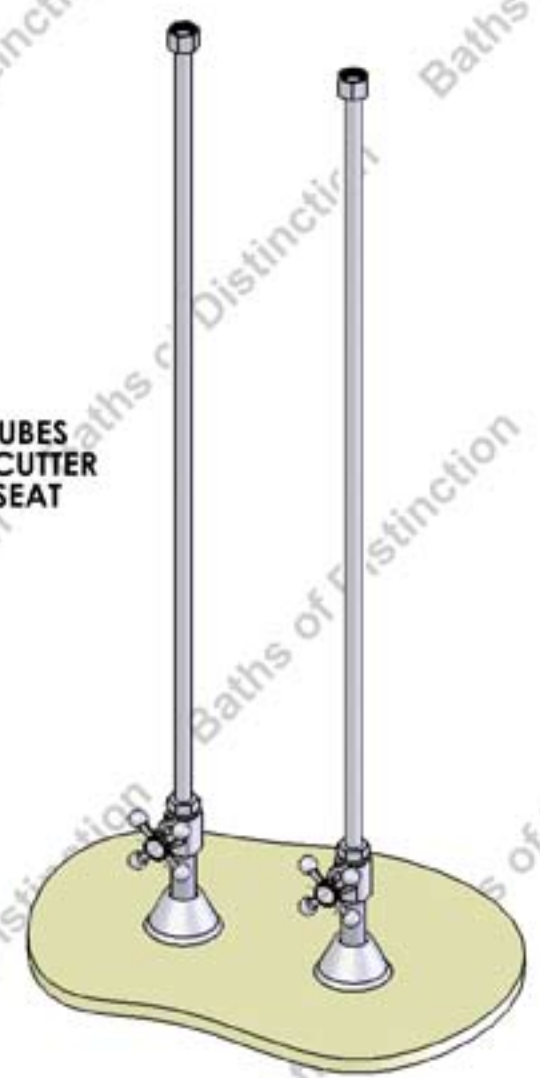

STRAIGHT SUPPLY LINES WITH VALVES

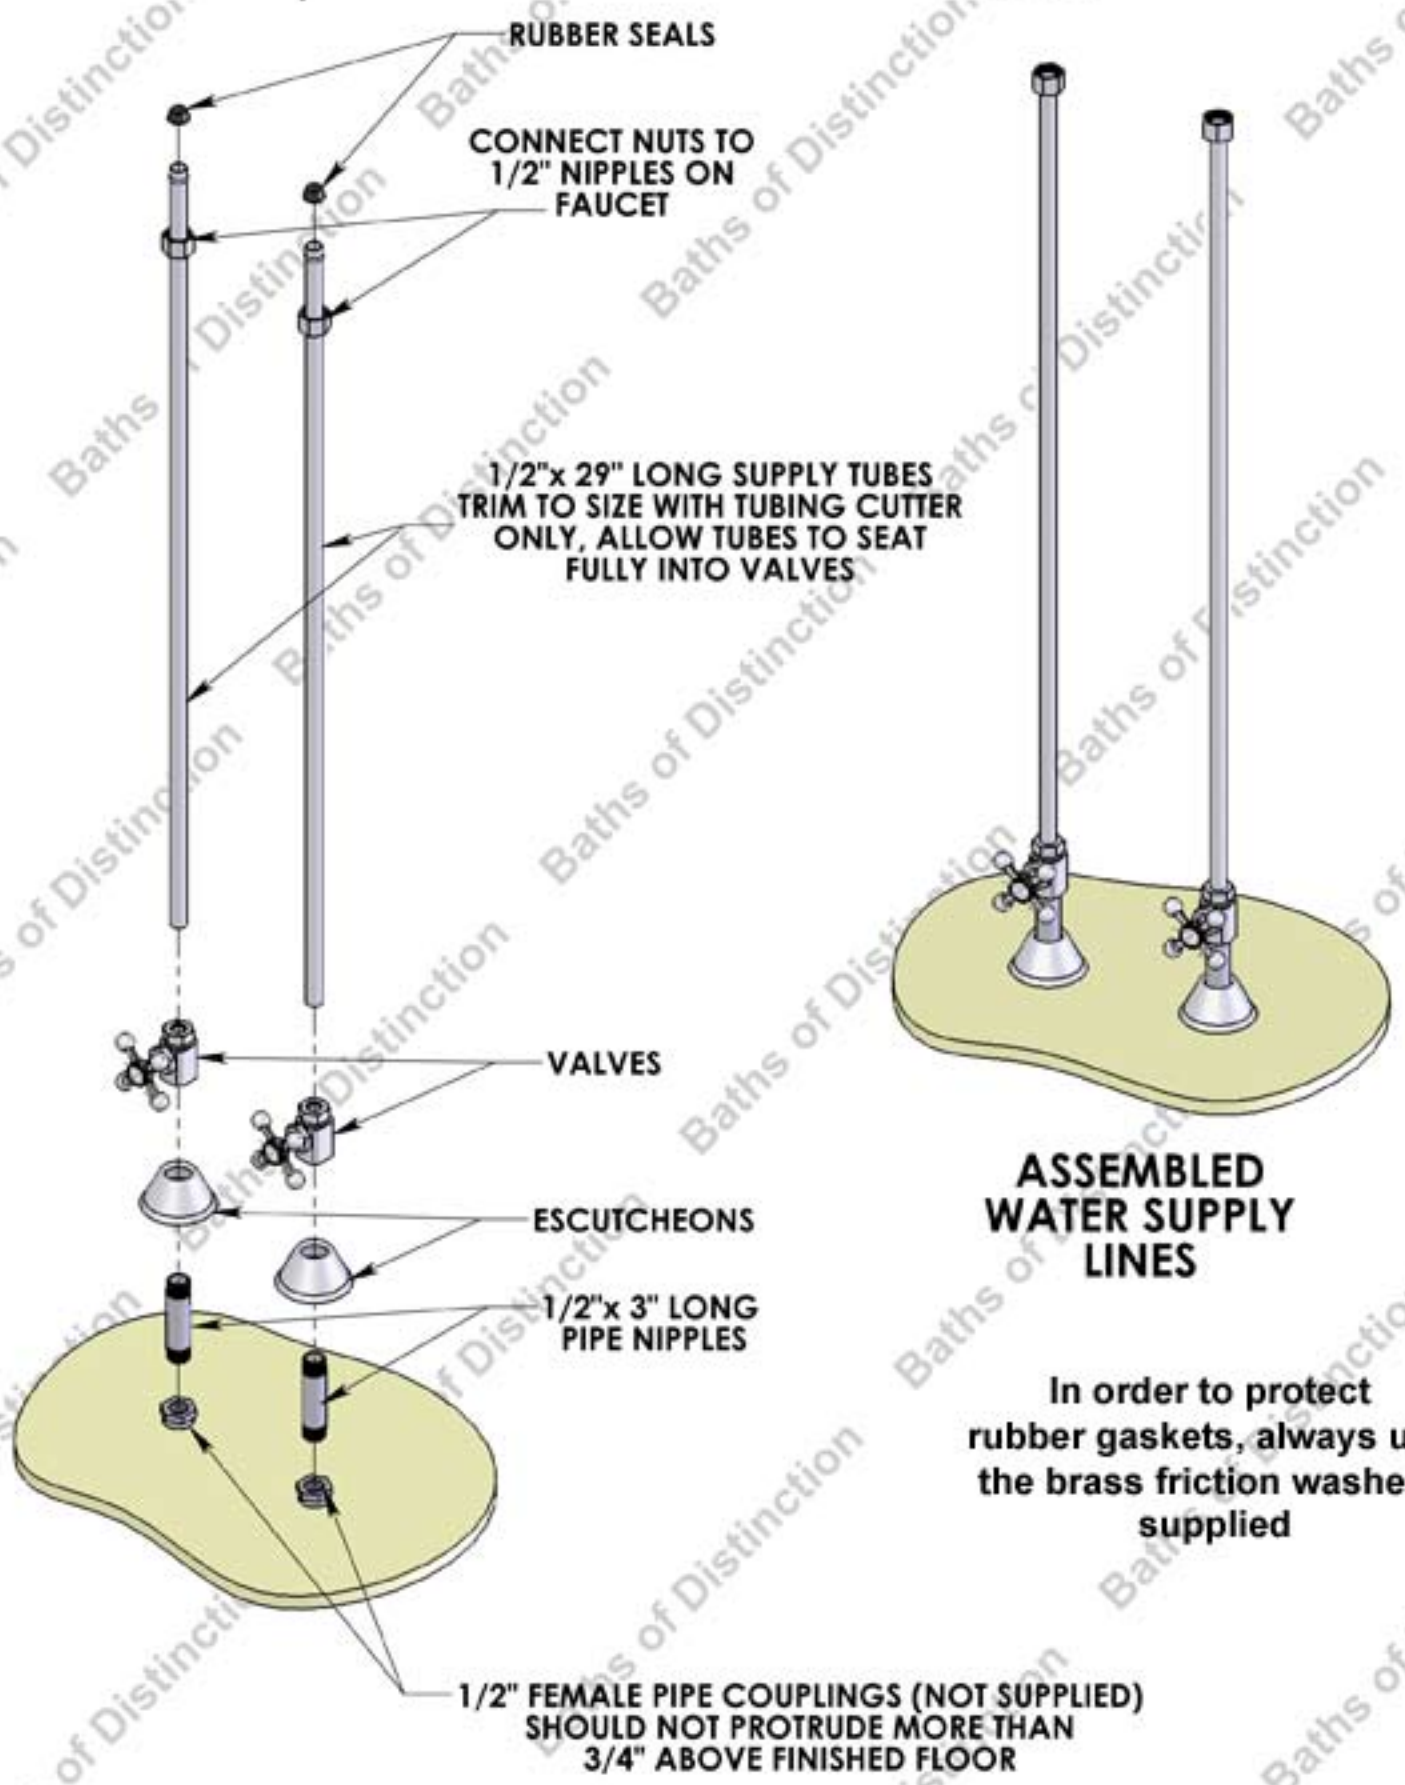

ASSEMBLED WATER SUPPLY LINES

In order to protect rubber gaskets, always use the brass friction washers supplied

1/2" FEMALE PIPE COUPLINGS (NOT SUPPLIED) SHOULD NOT PROTRUDE MORE THAN 3/4" ABOVE FINISHED FLOOR